

Fuel Tank Removal

- **READ THE BENTLEY or HAYNES MANUAL FIRST!**
- You will need a FLAT surface to complete this repair for your safety.
- **READ ALL OF THIS PROCEDURE SEVERAL TIMES SO THAT YOU UNDERSTAND IT. DO NOT PERFORM THE PROCEDURE OUT OF ORDER. THIS WILL RESULT IN DEATH OR SERIOUS INJURY.**
- Read our [Safety](#) page too.

TOOLS NEEDED:

1. 13mm Socket (3/8 or 1/2)
2. 1/2 drive break over bar
3. 3/8 or 1/2 drive ratchet
4. Various Extensions for ratchets
5. 1/4 inch nut driver or flat head screwdriver
6. Multiple shop towels (least 15)
7. lineman dikes or wire cutters
8. 2 wire coat hangers or Nylon cord
9. 1 roll masking tape

Procedure for removal

1. Drive or drain fuel tank until the fuel gauge shows **EMPTY** or at least in reserve.



2. Remove the four bolts that hold in fuel tank.



