

Severe Service Maintenance Schedule

Mileage Interval	Maintenance Items to do
@ Every 1,500 miles	Valve Adjustment
	Oil Change
	Lubricate doors, <u>bonnet</u>, <u>deck lid</u>, and locks
	Battery: add DISTILLED water
	Battery Clean and grease terminals
@ Every 4,500 Miles	Adjust "V" belt tension
	Adjust timing with timing light
	Check air filter and air cleaner
	Adjust throttle cut off valve
	Check exhaust system for damage
	Check and Adjust Clutch pedal free play
	Check kick down switch (automatic trans)
	Maintenance tune up: clean, regap or replace
@ Every 9,000 Miles	BOSCH spark plugs
	BOSCH ignition points
	BOSCH Distributor cap & Rotor
	BOSCH Condenser
	Fuel filter
@ Every 12,000 miles	Adjust Brakes
	Adjust Master cylinder piston rod
@ Every 18,000 miles	Clean Cooling Fins on the Torque Converter
	Change ATF (Automatic Transmission Fluid): Especially if towing a trailer, stop and go traffic, or high temperature is involved with either of the two conditions. (90% of all failures in Automatic Transmission are due to HEAT.

@ Every 24,000 miles	Repack front and rear wheel bearings with MOLYBDENUM grease
	Change 85w90 in manual transmission
	Change 85w90 in the carrier of automatic transmission
	Check steering box and fill if required
	Check Constant Velocity (CV) joints and repack
@ Every 48,000 miles	Disk brake rotors should be turned to remove ridges
	Flush out brake system with new fluid

Copyright 2009 WOLFEBERG II