

Lifting up Your VW: Front End

- **READ THE BENTLEY or HAYNES MANUAL FIRST!**
- You will need a FLAT surface to complete this repair for your safety.
- **READ ALL OF THIS PROCEDURE SEVERAL TIMES SO THAT YOU UNDERSTAND IT. DO NOT PERFORM THE PROCEDURE OUT OF ORDER. THIS WILL RESULT IN DEATH OR SERIOUS INJURY.**
- Read our [Safety](#) page too.

We have available for download the complete procedure on our [DOWNLOADS](#) page

TOOLS NEEDED:

1. Floor Jack (4000 lbs. capacity)
2. 2 jack stands
3. 2 Wheel Chocks
4. Tire iron or "Tire Star"



Procedure for Lifting

1. Remove hub caps on front axle with a screwdriver or tire iron



2. Break loose all lug bolts on tire



3. Chock rear tires.



4. Place floor jack in center of lower beam just behind the sway bar on the front.



5. Jack up the vehicle to a height of a comfortable level for you to crawl underneath


6. **BEFORE GETTING UNDER THE VW:** Place jack stands just to the



outside of the zerker fittings on the front.



7. Remove all lug bolts and place them in the hub cap.

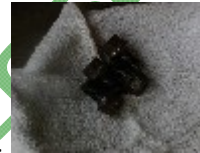

8. Remove the tire from the Brake Drum.



COPYRIGHT 2005 VINTAGE VULCAN BURG II